



HP InkJet Printers	HP Everyday Photo Paper		HP Advanced Photo Paper				HP Premium Plus Photo Paper				HP Iron-on Transfers	HP Social Media Snapshots	HP Professional Paper			HP PageWide Bro 6L SC Paper		HP ZINK® Sticky-backed Photo Paper		
	A4	10 x 15	10 x 15	13 x 18	A4	A3	10 x 15	13 x 18	A4	A3	A4	10 x 13	A4 120 g	A3 120 g	A4 180 g	A3 180 g	A4	A3	5 x 7.6	
	Q5451A Q2510A	CR757A	Q8691A Q8008A Q8692A	Q8696A	Q5456A Q8698A	Q8697A	CR677A CR695A	CR676A	CR673A CR674A CR672A	CR675A	C6050A	W2G60A*	Q6593A	Q6594A	Q6592A C6818A	C6821A	Z7567A	Z7568A	W4Z13A 10E37A	
HP OfficeJet J5730/J5780/J5785/J6410/J6415/J6424	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP OfficeJet 5740 e-AIO	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP OfficeJet 6100 ePrinter/6600 e-AIO/6700 Premium e-AIO	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP OfficeJet 6110	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP OfficeJet 6205/6210/6215	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP OfficeJet 6310/6315	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP OfficeJet K7100	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP OfficeJet 7210	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP OfficeJet 7310/7410	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP OfficeJet Pro 8210/8218	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP OfficeJet Pro 8710/8715/8718/8719	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP OfficeJet Pro 8720/8725/8730/8740	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP OfficeJet Pro 7740 WF	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP OfficeJet 7100 WF ePrinter/7510 WF/7610 WF eAIO/7612 WF	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Officejet 9100 series	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Officejet Pro K550/K5400	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Officejet Pro L7480/L7580/L7590/L7680/L7780/K8600	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Officejet Pro K850 series	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP OfficeJet Pro 8600 E-AIO/8600 Plus e-AIO/8610/8615/8620	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Officejet Pro 8100 e-Printer (N811a)	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP PageWide Pro 352dn/377dn/452dw/477dw	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP PageWide Pro 452dw/477dw	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
<b>HP Photosmart</b>	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP PSC 500	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP PSC 1100/1200/1205	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP PSC 1210/1213/1215/1217/1219	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP PSC 1310/1311/1312/1315/1315s/1317	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP PSC 1340/1350/1355	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP PSC 1402/1410/1415/1417	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP PSC 1507	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP PSC 1510/ HP PSC 1510s/ HP DeskJet 1510	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP PSC 1600/1610	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP PSC 2105/2108/2110/2115/2171/2175/2179/2210	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP PSC 2350/2355/2355p	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP PSC 2410/2510	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Fax 1220	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart 100/130/230	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart 145/245	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart 325/335/375/385/422/428/475	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart A310/A314/A320/A432/A433/A436/A440/A441/A444/A516/A526	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart A532/A612/A618/A626/A636/A646/A717/A826	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart 1000/1100/1115/1215/1218/1315	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart 2570	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart 2575	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart 2610/2710	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart 3110/3210/3310/D6160/D7160/D7260/D7360/D7460	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart C3170/C3175/C3180/C3190/C4180/C4190	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart C4205/C4270/C4272/C4280/C4340/C4380/C4390/C4424/C4472/C4480/C4485/C4524/C4580/C4585/C4599	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart C4670/C4680/C4685/C4780	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart C5180/C6180/C6270/C6280/C6285/C7180/C7280/C8180	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart C5280/C5288	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart C5324/C5380/C6324/C6380/D5460	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart D5160	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart D5360	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart e-AIO 5520/6520	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart e-AIO 5510/5515/6510	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart 7150/7260/7345/7350/7450/7459/7550/7655	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart 7510 e-AIO	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart 7520 e-AIO	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart 7660/7755/7760/7762/7960/7960gp	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart 7850	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart 8050	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart 8150/8450/8450gp	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart 8250	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart 8750/8750gp	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart Pro B8350	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart B8550	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart Pro B9180/B8850	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart e-Station C510a	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart B010a/B109a/B109d/B109f	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart Wireless B109n/B110a/c/e	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart Plus B209a/B209c/B210a/c	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart Premium C309n/g/C310a	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart Premium Fax C309a/C410b	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Photosmart Ink Advantage K510a	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
<b>HP ENVY</b>	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP ENVY 100 D410a	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP ENVY 110 e-AIO	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP ENVY 120 e-AIO	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP ENVY 4500/4502/4504/5530/5532 e-AIO printers	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP ENVY 4520	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP ENVY 5540 e-AIO	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP ENVY 5640 e-AIO	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP ENVY 7640 e-AIO	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
HP Sprocket Photo Printer***	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.

\* Use with the HP Social Media Snapshot App and wireless / AirPrint / Google Print Plugin capable InkJet printers.

\*\* For use with HP Sprocket Photo Printer only.

\*\*\* HP Sprocket printer is only available in UK, Germany, Spain and Switzerland.

[hp.com/go/learnaboutsupplies](http://hp.com/go/learnaboutsupplies)

© Copyright 2017 HP Development Company, L.P. The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

4AA2-5925EEE, July 2017

