

HP InkJet Printers	HP Everyday Photo Paper		HP Advanced Photo Paper				HP Premium Plus Photo Paper				HP Iron-on Transfers	HP Social Media Snapshots	HP Professional Paper			
	A4	10 x 15	10 x 15	13 x 18	A4	A3	10 x 15	13 x 18	A4	A3	A4	10 x 13	A4 120 g	A3 120 g	A4 180 g	A3 180 g
	Q5451A Q2510A	CR757A	Q8691A Q8008A Q8692A	Q8696A	Q5456A Q8698A	Q8697A	CR677A CR695A	CR676A	CR673A CR674A CR672A	CR675A	C6050A	W2G60A*	Q6593A	Q6594A	Q6592A C6818A	C6821A
HP OfficeJet 7500A WF
HP OfficeJet Pro 8000/8500 series/8500A/8500A Plus
HP OfficeJet 4105/4110/4212/4215/4219/4252/4255/4315/4355
HP OfficeJet 4500 G510a/g/n
HP OfficeJet 5110/v30/v40/v45/HP PSC 750/950/HP Fax 1230
HP OfficeJet J5520
HP OfficeJet 5505/5510/5515
HP OfficeJet 5605/5607/5610/5615
HP OfficeJet J5783/J6413
HP OfficeJet 6110
HP OfficeJet 6213
HP OfficeJet 6313
HP OfficeJet 7213
HP OfficeJet 7313/7413
HP OfficeJet 7100 WF e-Printer/7510 WF/7610 WF e-AiO/7612 WF
HP OfficeJet 7610 WF e-AiO
HP OfficeJet 9100 series
HP OfficeJet J3680
HP OfficeJet J4580/J4660/J4680
HP OfficeJet K7103
HP OfficeJet Pro 7740 WF
HP OfficeJet Pro 8100 e-Printer (N811a)
HP OfficeJet Pro 8600 e-AiO/8600 Plus e-AiO/8610/8615/8620
HP OfficeJet Pro 8710/8715/8718/8719
HP OfficeJet Pro 8720/8725/8730/8740
HP OfficeJet Pro K550/K5400/L7480/L7580/L7590/L7680/L7780/K8600
HP OfficeJet Pro K850 series
HP OfficeJet Pro X451dw/X551dw/X476dw MFP/X576dw MFP
HP Photosmart
HP PSC 500
HP PSC 1100/1200 series/1205
HP PSC 1310/1311/1312/1315/1315s/1317
HP PSC 1210 series
HP PSC 1340/1350/1355
HP PSC 1402/1410/1415/1417
HP PSC 1513/1513s
HP PSC 1613
HP PSC 2100/2200 series/HP Digital Copier 410
HP PSC 2353
HP PSC 2410/2510
HP Fax 1220
HP Fax 3180
HP Photosmart 100/130/230
HP Photosmart 145/245
HP Photosmart 325/375
HP Photosmart 335/385/428/475
HP Photosmart A310/A314/A320/A432/A433/A436/A440/A441/A444/A516/A526
HP Photosmart A532/A612/A618/A626/A636/A646/A717/A826
HP Photosmart 1000/1100/1115/1215/1218/1315
HP Photosmart 2573
HP Photosmart 2613/2713
HP Photosmart 3213/3313/D7163/D7263/D7363/D7463
HP Photosmart C4273/C4283/C4343/C4383/C4473/C4483/C4583/C5283
HP Photosmart C4683/C4783
HP Photosmart C5183/C6183/C6283/C7183/C7283/C8183
HP Photosmart C5383/C6383/D5463
HP Photosmart D5063/C3183/C4183/D5163/D5363
HP Photosmart 5510/5515/6510 e-AiO
HP Photosmart 7150/7260/7345/7350/7450/7459/7550/7655
HP Photosmart 7510 e-AiO
HP Photosmart 7660/7755/7760/7762/7960/7960gp
HP Photosmart 8053
HP Photosmart 8153/8453
HP Photosmart 8253
HP Photosmart Pro B8353
HP Photosmart B8553
HP Photosmart 8753
HP Photosmart Pro B9180/B8850
HP Photosmart B010b/B109c/B110a
HP Photosmart Wireless B109g/B109r/B110d/B110e
HP Photosmart Plus B209b/B210b
HP Photosmart Premium C309h/C310b
HP Photosmart Premium Fax C309c/C410c
HP ENVY
HP ENVY 110 e-AiO
HP PageWide
HP PageWide Pro 352dn/377dn
HP PageWide Pro 452dw/477dw

* Use with the HP Social Media Snapshot App and wireless / AirPrint / Google Print Plugin capable InkJet printers.

hp.com/go/learnaboutsupsplies

© Copyright 2016 HP Development Company, L.P. The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

4AA2-5926EEE, October 2016

