### Overview


### HP ElitePad 1000 G2 Healthcare Tablet



- 1. Combo Audio-in (headset)/Audio-out (microphone) jack
- 2. Lanyard connector holes
- 3. Internal microphone
- 4. Pen clip connector
- 5. Power button
- **6.** Camera and LED Flash
- 7. Hand Strap connectors
- 8. Volume buttons
- **9.** Barcode reader trigger buttons
- 10. Security cable slot
- **11.** Speakers (2)
- 12. HDMI port

- 13. System connector
- **14.** USB 3.0 port
  - Barcode reader (select models only)
- 16. Smart card reader

### Overview

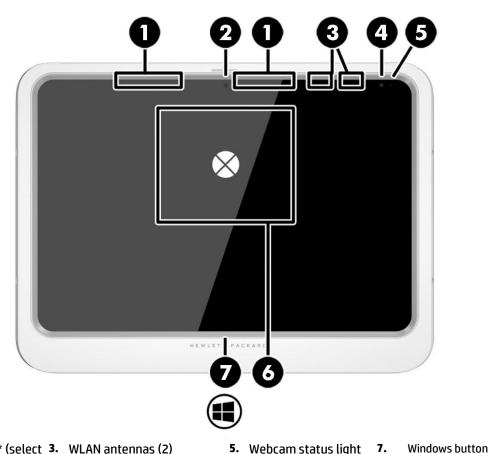

- 1. WWAN antennas (2)\* (select 3. WLAN antennas (2) models only)
- 2. Front webcam
- 4. Ambient light sensor
- **5.** Webcam status light **7.** (front)
- 6. Near Field
  Communications (NFC)
  tapping area
  (select models only)

#### Overview

- Windows 8.1 Pro 64, Windows 8.1 64, Windows 10
- Two integrated webcams (2.1 MP/1080p (front facing); 8 MP with LED flash (rear facing))
- Intel® Atom Bay Trail-T Z3795 Quad Core 1.6 GHz SoC BGA
- Integrated Intel® HD Graphics
- 10.1-inch diagonal full HD (1920 x 1200) wide-viewing angle outdoor display; 16:10 Aspect Ratio
- 4GB LPDDR3 1067 MHz Memory
- 2-cell (30 WHr) polymer HP Long Life battery
- 128 GB embedded Multi Media Card (eMMC)
- Weight starting at 2.4 lb (1.10 kg) (ElitePad with healthcare jacket)
- Wireless connectivity:
  - HP hs3110 HSPA+ Mobile Broadband Module with GPS support
  - HP lt4111 LTE/EV-DO/HSPA+ Qualcomm® Gobi™ 4G Module with GPS support
  - Broadcom 43241 802.11 a/b/g/n (2x2)+ BT 4 LE SDIO
- ENERGY STAR® 6.1 certified
- IP 54 tested. IP 54 provides level seals against liquid and dust ingress to IP 54 rating
- IL-STD 810G tested including 3ft (0.91m) drop onto linoleum covered concrete
  - MIL STD is not intended to demonstrate fitness for U.S. Department of Defense contract requirements or for military use. MIL STD test results are not a guarantee of future performance under these test conditions.
     Damage from drops requires separately purchase Accidental Damage Protection HP Care Pack.
- EN/IEC60601-1-2 NOTE: The HP ElitePad 1000 G2 is a general purpose device and is not intended for use in the diagnosis, cure, treatment, or prevention of disease or other medical conditions)
- Washable with common hospital cleaners, including isopropyl alcohol wipes, bleach and other typical cleaners
- Includes a 2D barcode reader with a unique "visual success indicator" that displays a green dot on the target when the barcode is successfully read. No need to take eyes off the target to verify the barcode has been read.
- Dual triggers for easy push-button access to bar code activation
- Additional configurable audio indicator (beep) for successful barcode read
- Integrated Smart Card reader capable of reading Smart Cards and Common Access Cards
- One handed docking using optional HP ElitePad Docking Station \*\*\*\* I/O door held out of the way
- Included I/O: USB 3.0, HDMI in addition to standard power connector
- Compatible with existing HP ElitePad adapters (SD card, Ethernet, VGA adapter and many others)
- Included are two detachable and washable hand straps that can be switched in seconds for right hand or left hand operation
- Shoulder sling provisions for hands-free mobility. Shoulder sling sold separately as an optional feature.
- Standard commercial 1 year limited warranty; upgrade available with optional HP Care Pack

NOTE: See important legal disclosures for all listed specs in their respective features sections.



#### **Features**

#### **PRODUCT NAME**

HP ElitePad 1000 G2 Healthcare Tablet

#### **OPERATING SYSTEM**

Preinstalled (Windows)

Windows 8.1\*

Windows 8.1 Pro 64\* Windows 10 Pro 64\*

Web Only Windows 8.1

Windows 8.1 Pro 64

Swindows 8.1 Enterprise 64

Windows 10 Pro 64 Windows 10 Enterprise 64

\*Note: Not all features are available in all editions or versions of Windows. Systems may require upgraded and/or separately purchased hardware, drivers, software or BIOS update to take full advantage of Windows functionality. Windows 10 is automatically updated, which is always enabled. ISP fees may apply and additional requirements may apply over time for updates. See http://www.microsoft.com.

#### **PROCESSOR**

Intel® Atom Z3795 (Quad Core 1.6 GHz base/2.39 GHz burst SoC BGA)\*

\* Multi-Core is designed to improve performance of certain software products. Not all customers or software applications will necessarily benefit from use of this technology. 64-bit computing on Intel® architecture requires a computer system with a processor, chipset, BIOS, operating system, device drivers, and applications enabled for Intel® 64 architecture. Processors will not operate (including 32-bit operation) without an Intel® 64 architecture-enabled BIOS. Performance will vary depending on your hardware and software configurations. Intel® numbering is not a measurement of higher performance.

**NOTE:** Processor speed denotes maximum performance mode; processors will run at lower speeds in battery optimization mode.

#### **CHIPSET**

Integrated SoC PCH

#### GRAPHICS

Integrated:
Intel® HD Graphics

#### **DISPLAY**

10.1-inch diagonal full HD (1920 x 1200) wide-viewing angle outdoor viewable display

- Brightness: 400 nits (typical)\*
- Wide-viewing angle
- Direct bonded
- Multi-touch capacitive digitizer
- Auto rotate (selectable)
- Tough, durable Corning® Gorilla® Glass 3
- Anti-smudge coating
- External Up to 32-bit per pixel color depth
- HDMI supports resolutions up to 1920 x 1080 @ 60 Hz



#### **Features**

\* All specifications represent the typical specifications provided by HP's component manufacturers; actual performance may vary either higher or lower.

#### STORAGE AND DRIVES

#### **Internal Storage Device**

128 GB\* embedded Multi Media Card (eMMC)

#### Removable Storage

Optional HP External Optical Drive using ElitePad USB connector

\* For Solid State Drives (SSD), GB = 1 billion bytes. Actual formatted capacity is less. Up to 5 GB for Windows 8.1 is reserved for system recovery software.

#### **MEMORY**

#### Standard

4 GB LPDDR3 1067 MHz memory

#### **NETWORKING/COMMUNICATIONS**

#### Wireless

Support for a broad range of secure, integrated wireless LAN and wireless WAN options featuring support for the latest industry standards. Broadband Wireless (WWAN) is available in select countries. Wireless LAN and integrated Bluetooth are also available (both are factory configurable only) and can be combined with any of the supported wireless WAN options.

#### **Broadband Wireless (WWAN)**

HP hs3110 HSPA+ Mobile Broadband Module with GPS support \*,\*\*
HP lt4111 LTE/EV-DO/HSPA+ Qualcomm® Gobi™ 4G Module with GPS support \*,\*\*

#### **Integrated Wireless LAN**

Broadcom 43241 802.11 a/b/q/n (2x2)+ BT 4 LE SDIO\*\*\*

#### **Other Wireless Features**

Miracast

Intel® WiDi Software\*\*\*\*

- \* WWAN connection requires wireless data service contract, network support, and is not available in all areas. Contact service provider to determine the coverage area and availability. Connection speeds will vary due to location, environment, network conditions, and other factors.
- \*\* 4G LTE not available on all products, and in all regions.



#### **Features**

\*\*\*Wireless access point and Internet service is required and is not included. Availability of public wireless access points limited.

\*\*\*\* Integrated Intel® Wi-Di feature is available on select configurations only and requires separately purchased projector, tv or computer monitor with an integrated or external Wi-Di receiver. External Wi-Di receivers connect to the projector, tv or computer monitor via a standard HDMI cable, also sold separately.

#### **AUDIO/MULTIMEDIA**

#### **Audio**

HD audio

3.5mm Combo stereo/headphone/microphone jack

#### Cameras

Integrated 2.1 MP/1080p\* with LED (front-facing) 8 MP with LED flash (rear facing)

\* HD content required to view HD images.

#### **INPUT DEVICES**

Optional HP Executive Tablet Pen G2\*

\* Sold separately or purchased as an optional feature.

#### **SENSORS**

Accelerometer
eCompass
Gyroscope
Ambient Light Sensor
Haptics
GPS module available units with WWAN capabilities

#### **SOFTWARE AND SECURITY**

#### Software

Included

#### Preinstalled (Windows)

Windows 8.1\* Windows 8.1 Pro 64\* Windows 10 Pro 64\*

#### **Web Support**

Windows 8.1 Windows 8.1 Pro 64 Swindows 8.1 Enterprise 64 Windows 10 Pro 64 Windows 10 Enterprise 64

\*Note: Not all features are available in all editions or versions of Windows. Systems may require upgraded and/or separately purchased hardware, drivers, software or BIOS update to take full advantage of Windows functionality. Windows 10 is automatically updated, which is always enabled. ISP fees may apply and additional requirements may apply over time for updates. See http://www.microsoft.com.

Windows 8.1	Windows 10



#### **Features**

Security	HP Client Security (incl. Credential	HP Client Security (incl. Credential		
	Manager and Password Manager)	Manager and Password Manager)		
	HP Drive Encryption⁵	HP Drive Encryption <sup>5</sup>		
	Device Access Manager with Just In	Microsoft Defender <sup>1</sup>		
	Time Authentication			
	Microsoft Defender <sup>1</sup>			
Communications	HP Mobile Connect <sup>2</sup>	HP Mobile Connect <sup>2</sup>		
	HP Wireless Hotspot <sup>3</sup>			
	HP Roaming Alert (available from	HP Roaming Alert (available from		
	Windows store)	Windows store)		
HP Value Add Software	HP ePrint Driver⁴	HP ePrint Driver <sup>4</sup>		
	HP Manageability	HP Manageability		
	HP PageLift	Win 10 Welcome App		
	HP Registration	HP Setup		
	HP Setup	HP Softpaq Download Manager		
	HP Softpaq Download Manager	HP Software Setup		
	HP Support Assistant	HP Support Assistant		
	HP WallPaper	HP WallPaper		
	System Default Settings	System Default Settings		
	UEFI System Diagnostics	UEFI System Diagnostics		
3rd Party	Amazon Kindle			
	PDF Complete, Corporate Edition			
	Box 50GB Offer <sup>8</sup>			
Microsoft Products	Buy Office	Buy Office		

- 1. Internet access required.
- 2. HP Mobile Connect is available in EMEA only and requires a compatible CDMA or HSPA mobile broadband module and prepaid service purchase. Find coverage and availability for your service area at <a href="https://www.hp.com/qo/mobileconnect">www.hp.com/qo/mobileconnect</a>.
- 3. The HP Wireless Hotspot application requires an active internet connection and separately purchased data plan. While HP wireless hotspot is active, on-device applications will continue to work and will use the same data plan as the wireless hotspot data usage may incur additional charges. Check with your service provider for plan details. Requires Windows 8.1 or HP Connection Manager for Windows 7.
- 4. Offer available on new 2013 and 2014 HP Business Desktops, Notebooks, and Tablets. Requires Box registration. Offer available to new Box users only. Offer subject to change without notice. Box app requires Windows 8 or 8.1



#### **Features**

- 5. Requires Windows. Data is protected prior to Drive Encryption login. Turning the PC off or into hibernate logs out of Drive Encryption and prevents data access.
- 6. Offer available on new 2013 and 2014 HP Business Desktops, Notebooks, and Tablets. Requires Box registration. Offer available to new Box users only. Offer subject to change without notice. Box app requires Windows 8 or 8.1.

#### **Security**

**Client Management Solutions -** Fully manageable and supported by industry-standard HP Client Management Solutions. Optional LANDesk management suite simplifies mobile device management and security. Contact your account team or hp@landesk.com for more information.

LANDesk Management Suite 9.5 (optional)LANDesk Security Suite (optional) HP SoftPaq Download Manager (SDM)\* HP System Software Manager (SSM)\* HP BIOS Configuration Utility (BCU)\* HP Client Management Interface (HP CMI)\*

\* free downloads available at the CMS website under HP Hardware Management tools www.hp.com/go/clientmanagement

#### Standard

Firmware TPM\* (default), hardware TPM (v1.2) Near Field Communication with Secure Element\*\*

- \* A subset of the TPM 2.0 specification version v0.89 as implemented by Intel® Platform Trust Technology (PTT).
- \*\* NFC is shipped disabled. NFC application or software sold separately. **Please note that only NFC standards compliant cards are supported.**

For more information on HP security solutions refer to: <a href="http://www.hp.com/qo/security">http://www.hp.com/qo/security</a>

#### **POWER**

#### Stand-alone power requirements (Jacket)

Normal Operating Voltage 6.5 V Average Operating Power 8.952 W Max Operating Power < 40 W

#### **Power Supply**

External 10-watt HP ElitePad 10W Smart AC Adapter with detachable duck-heads Total length is 5.9 ft (180 cm).

#### **Primary Battery**

2-cell (30 WHr) Lithium Polymer battery

#### **Battery Life**

12 hours 30 minutes for the tablet alone\*

\*Testing conducted by HP consisting of full battery discharge while running a series of productivity scripts against the following applications (which may or may not be included with your particular product): Adobe AcrobatReader 7.0, Adobe Illustrator CS2, Adobe Photoshop CS2, Apple Quicktime 7.1, Intervideo WinDVD 8, Macromedia Flash 8, Microsoft Office 2003 Pro, Microsoft Project 2003, and Winzip 10.0. Prior to testing, the system was fully charged, display brightness was set at 60 nits, wireless was turned off, and auto dim, suspend, hibernate and all other programs, utilities, and services not essential to running the computer system or battery life test were disabled. Battery life will vary depending on the product model, configuration, loaded applications, features, use, wireless functionality and power management settings.



#### **Features**

The maximum capacity of the battery will naturally decrease with time and usage.

#### **System Standby Time**

Standby life will vary depending on various factors including battery, Memory, CPU, EC and LAN chip. The maximum capacity of the battery will naturally decrease with time and usage.

#### **Power Conservation**

Balanced

\* Sold separately or as an optional feature.

#### **WEIGHTS & DIMENSIONS**

#### Weight

2.4 lb (1.10 kg) (ElitePad with Healthcare Jacket)

**Dimensions** ( $w \times d \times h$ )

8.17 x 10.94 x 0.79 in (207.5 x 278 x 20 mm)

NOTE: Weight includes 2-cell battery, embedded Multi Media Card, and 4 GB memory.

#### **PORTS/SLOTS**

#### **Ports**

- (1) USB 3.0 port
- (1) Power/system connector
- (1) HDMI port

#### Other:

(1) Smartcard/Common Access Card (CAC) reader

#### **EXPANSION SOLUTIONS\***

Optional HP ElitePad Docking Station

#### **EXPANSION MODULES\***

2D barcode reader (optional) with a unique visual success indicator, reader type WVGA 752 x 480 pixels, light source: aiming 650nm VLD, print contrast: 25% minimum; scan angle pitch: +/- 40°, roll: 180°, skew: +/- 40°

<sup>\*</sup> Sold separately or as an optional feature.

Barcode reader	Reader type	Wide VGA 752 x 480 pixels
	Light Source	Aiming 650nm VLD
	Nominal working distance/depth of field	Code 39 – 5 mil : 4.7 to 17.7cm Code 39 -10 mil : 1.7 to 33.2cm DataMatrix 10 mil : 2.7 to 17.1cm DataMatrix 15mil : 1.2 to 24.6cm EAN 13 mil : 2.5 to 41.9cm PDF 417 – 10 mil : 2.2 to 23.9cm QR Code – 10 mil : 3.5 to 16cm
	Print contrast	25% minimum
	Scan angle	Pitch : +/- 40deg Roll: 180 deg



<sup>\*</sup> Sold separately or as an optional feature.

#### **Features**

Skew: +/- 40deg

### Decode symbologies factory default barcodes

- 1D
- Standard 1D Codes
- 2D
- o Aztec Code
- China Han Xin Code
- DataMatrix
- MaxiCode
- MicroQR Code
- o QR Code
- Postal Codes
  - Australian Post
  - British Post
  - China Post
  - o IMB
  - Japanese Post
  - KIX Post
  - Korea Post
  - Planet Code
  - Postnet
  - Royal Mail Code (RM4SCC)
- Stacked Codes:
  - EAN/JAN Composits
  - GSI DataBar Composites
  - o GSI DataBar Expanded Stacked
  - GSI DataBar Stacked
  - GSI DataBar Stacked Omnidirectional
  - Macro PDF
  - o Mircro PDF 417
  - o PDF 417
- UPC A/C Composites

#### **SERVICE AND SUPPORT**

1-year standard parts, labor and onsite limited warranty, depending on country); 1-year limited warranty on primary battery. Optional HP Care Pack Services\* are extended service contracts which go beyond your standard warranties.\*\*

For more details visit: <a href="http://www.hp.com/qo/cpc">http://www.hp.com/qo/cpc</a>.

**NOTE**: Service levels and response times for HP Care Packs may vary depending on your geographic location. Service starts on date of hardware purchase. Restrictions and limitations apply. For details, visit <a href="https://www.hp.com/qo/cpc">www.hp.com/qo/cpc</a>. Consult the HP Customer Support Center for details. <a href="https://h20000.www2.hp.com/bizsupport/TechSupport/ProductRoot.isp">http://h20000.www2.hp.com/bizsupport/TechSupport/ProductRoot.isp</a>

**NOTE:** HP recommends that HP Custom Integration Services (CIS), an authorized HP service provider, or participants in the HP Self Maintainer program perform insertion or removal of a SIM or SD card. Any damage caused by the customer removing the tablet from the jacket is not covered under the limited warranty of the product. HP requires that HP Custom Integration



<sup>\*</sup> Factory setting has these code selections enabled by default

<sup>\*</sup> Sold separately or as an optional feature.

<sup>\*\*</sup> IP54 is covered under the HP limited warranty up to IP54 for water and dust ingress.

#### **Features**

Services (CIS), an authorized HP service provider, or participants in the HP Self Maintainer program perform future maintenance operations.

### **ENVIRONMENTAL/CERTIFICATIONS**

**Temperature Operating** 41° to 95° F (5° to 35° C)

Non-operating  $-4^{\circ}$  to  $140^{\circ}$  F ( $-20^{\circ}$  to  $60^{\circ}$  C)

**Relative Humidity** Operating 10% to 90%, relative humidity

Non-operating 5% to 95% relative humidity, 101.6° F (38.7° C) maximum wet

bulb temperature

**Shock Operating** Half Sine Wave Shock: 40G, 2ms duration

Non-operating Half Sine Wave Shock: 240G, 2ms duration

Squarewave Shock: 150G; 180in/sec velocity change

**Random Vibration** Operating 10-500 Hz, 0.5 grms

Non-operating 10-500 Hz, 1.0 grms

 Altitude
 Operating
 -50 to 10,000 ft (-15.24 to 3,048 m)

 (unpressurized)
 Non-operating
 -50 to 40,000 ft (-15.24 to 12,192 m)

For accessibility information on HP products, please visit: <a href="http://www.hp.com/accessibility">http://www.hp.com/accessibility</a>.

#### **COUNTRY OF ORIGIN**

China

**Mexico for TAA Compliant Configurations** 



#### **Environmental Data**

#### STORAGE AND DRIVES

128 GB embedded Multi Media Card (eMMC) Drive WeightUp to 2gCapacity128 GBHeight1.4 mmWidth12 x 16 mm

Interface MultiMediaCard Bus

**Performance** Sequential Read : 100MB/s (min.)

Sequential Write: 40MB/s (min.)

Features Embedded Multi Media Card v4.51 compliant, TRIM, Secure Erase, CMD5

support, Partition management, Enhanced Write Protection, HS200

support

#### **SECURITY**

Near Field Communications (NFC)\* **NFC Specifications** 

ISO/IEC 14443A, ISO/IEC 14443B PCD 106 kbps to 848 kbps

ISO/IEC 14443A, ISO/IEC 14443B PICC 106 kbps to 424 kbps

ISO/IEC 15693/ICODE reader

NFC-IP1 and NFC-IP2 protocols, 106 kbps to 424 kbps

MIFARE reader encryption mechanism NFC Forum Types 1-4 card reader

Supported Host

Interfaces Automatic wakeup from Standby via host control interface

**Dimensions** 0.18 x 0.18 x 0.04 in (4.5 x 4.5 x 0.9 mm)

120

Frequency Band 13.56 MHz ISO Band

**RF Output Voltage** 3.3 V max

150 mA max (@3.0V output)

**Power Consumption** 1.5 W (max)

Antenna Built-in

Antenna Range Up to 0.79 in (2 cm)

**Secure Element** SWP/HCI according to ETSI/SCP standardization

Interfaces

ISO/IEC 28361 (ECMA 373) NFC-WI. Data rate restricted to 106kbps P5CN145 SmartMX Secure Dual Interface PKI Smart Card Controller

Embedded Secure Element (eSE)

eSE Memory 144 kB EEPROM

264 kB User ROM

7.5 kB RAM (5 kB standard, 2.5 kB FameXE RAM)

**Operating Temperature** -13 to 185 °F (-25 to +85 °C)

NFC Type Definition						
	Type 1	Type 2	Type 3	Type 4		
ISO/IEC standard	14443 A	14443 A	JIS 6319-4	14443 A/B		
Compatible Product	Innovision Topaz	NXP MIFARE	Sony FeliCa	NXP DESFire, SmartMX-JCOP		
Data Rate	106 kb/s	106 kb/s	212, 424 kb/s	106/212/424 kb/s		
Memory	96 bytes, expandable to 2 kb	48 bytes, expandable to 2 kb	Variable, max. 1 MB	Variable, max. 32 kb		



#### **Environmental Data**

Anti-collision No	Yes	Yes	Yes
-------------------	-----	-----	-----

<sup>\*</sup> NFC is shipped disabled. NFC application or software sold separately. Please note that only NFC standards compliant cards are supported.

#### **NETWORKING/COMMUNICATIONS**

HP hs3110/3114 HSPA+ Technology/Operating **Mobile Broadband** 

Module with GPS support\*

bands

WCDMA/HSDPA/HSUPA/HSPA+: 2100(Band I), 1900 (Band II), AWS(Band IV),

850 (Band V), 900 (Band VIII) MHz

GSM/GPRS/EDGE: 1900 MHz (Band II), 1800 MHz (Band III), 850 MHz (Band V),

900 MHz (Band VIII) MHz

Wireless protocol

standards

GSM/GPRS/EDGE: Class B, Multi-slot class 33, coding schemes CS1 - CS4 and

MSC1 - MSC9.

UMTS/WCDMA: Release 99 and Release 7

Advanced Receiver Type 3i

**GPS** Standalone, A-GPS

**GPS Bands** 1575.42 MHz ± 1.023 MHz, GLONASS 1596-1607MHz

Maximum data rates HSPA+: UL 5.76 Mbps / DL 21.6 Mbps

HSPA: UL 5.76 Mbps / DL 7.2 Mbps WCDMA PS: UL 384 kbps / DL 384 kbps WCDMA CS: UL 64 kbps / DL 64 kbps GPRS: UL 85.6 kbps / DL 107 kbps EDGE: UL 236.8 kbps/DL 296 kbps

Maximum output power WCDMA/HSPA/HSPA+ MHz: 24 dBm

GPRS 1900/1800 MHz: 30 dBm GPRS 900/850 MHz: 33 dBm EDGE 1900/1800 MHz: 26 dBm EDGE 900/850 MHz: 27 dBm

Maximum power consumption

2500 mA (peak); 600 mA (average)

Power consumption,

sleep mode

3.6 mA

**Power management** 

USB selective suspend

Antenna type

Dual high efficiency multi-band antennae with spatial diversity

M.2, 3042-S3 Key B **Form Factor** 

Weight 6 q

**Dimensions** 

1.65 x 1.18 x 0.09 in (42 x 30 x 2.3 mm)

(Length x Width x

Thickness)

Voltage, Operating 3.3 V +1.1/-0.17 V

**Temperature, Operating** 14° to 131°F (-10° to 55°C) -40° to 185°F (-40° to 85°C) Temperature, Non-

operating

Humidity 5% to 95%

<sup>\*</sup> Mobile Broadband is an optional feature. Connection requires wireless data service contract, network support, and is not available in all areas. Contact service provider to determine the coverage area and availability. Connection speeds will vary due to location, environment, network conditions, and other factors.

#### **Environmental Data**

HP lt4111 LTE/EV-DO/HSPA+ 4G WWAN with GPS support\*

Technology/Operating

**Bands** 

LTE FDD all bands with diversity: 1700/2100MHz (Band IV (AWS), 700MHz

(Band XIII), 700MHZ (Band XVII), 1900MHz G Block (Band XXV)

WCDMA/HSDPA/HSUPA/HSPA+: all bands with diversity: 2100 MHz (Band I). 1900 MHz (Band II), AWS 1700/2100MHz (Band IV), 850 MHz (Band V), 800

MHz (Band VIII)

GSM/GPRS/EDGE: 1900 MHz (Band II), 1800 MHz (Band III), 850 MHz (Band V),

900 MHz (Band VIII)

CDMA: Cellular 800MHz (BCO), PCS 1900MHz (BC1)

Wireless Protocol

3GPP Release 8 LTE Specification **Standards** 

WCDMA R99, 3GPP Release 5, 6 and 7 UMTS Specification

EVDO Release O and Release A

**Maximum Data Rates** LTE: UL 50 Mbs / DL 100 Mbs

> DC-HSPA+: UL 5.76 Mbs / DL 42 Mbps HSPA+: UL 5.76 Mbs / DL 21.6 Mbps EDGE: UL 236.8 kbps / DL 236.8 kbps GPRS: UL 85.6 kbps / DL 85.6 kbps

**GPS** Standalone, XTRA

**GPS Bands** 1575.42 MHz ± 1.023 MHz, GLONASS 1596-1607MHz

**Maximum Output Power** LTE: 23 dBm

WCDMA/HSPA/HSPA+: 23 dBm GSM850/900, GMSK: 32 dBm GSM850/900, 8PSK: 27 dBm DCS1800 / PCS 1900, GMSK: 29 dBm DCS1800 / PCS 1900, 8PSK: 26 dBm

CDMA: 24 dBm

**Maximum Power** Consumption

LTE: 1.200 mA (peak): 900 mA (average) WCDMA: 1,100 mA (peak); 800 mA (average) EDGE: 2,500 mA (peak); 700 mA (average)

**Power Consumption,** 

Sleep Mode

2 mA

**Power Management** 

**USB** selective suspend

Antenna Type

Dual high efficiency multi-band antennae with spatial diversity

**Form Factor** M.2, 3042-S3 Key B

Weight 6 q

**Dimensions** 

1.65 x 1.18 x 0.09 in (42 x 30 x 2.3 mm)

(Length x Width x Thickness)

Voltage, Operating 3.3 V +1.1/-0.17 V

Temperature, operating -13° to 140°F (-25° to 60°C) Temperature, Non--40° to 185°F (-40° to 85°C)

operating

**Humidity, Non-operating** 95%

\* Mobile Broadband is an optional feature. Connection requires wireless data service contract, network support, and is not available in all areas. Contact service provider to determine the coverage area and availability. Connection speeds will vary due to location, environment, network conditions, and other factors.

#### **Environmental Data**

BROADCOM DUAL BAND WIRELESS-N 43241 802.11 A/B/G/N (2X2) WIFI + BLUETOOTH 4.0 COMBO ADAPTOR \* WIRELESS LAN STANDARDS IEEE 802.11A IEEE 802.11B IEEE 802.11G IEEE 802.11N

Interoperability Wi-Fi certified

Cisco Compatible Extensions Program compliant with Microsoft Windows 7,

Windows Vista and XP (details at:

http://www.hp.com/go/notebooks/WLAN)

**Frequency Band** 802.11b/g/n 2.402 - 2.482 GHz

802.11a/n 4.9 - 4.95 GHz (Japan)

5.15 - 5.25 GHz 5.25 - 5.35 GHz 5.47 - 5.725 GHz 5.825 - 5.850 GHz

**Antenna Structure** 

2 transmit; 2 receive (2x2)

Data Rates 802.11a

802.11a: 6, 9, 12, 18, 24, 36, 48, 54 Mbps

802.11b: 1, 2, 5.5, 11 Mbps

802.11g: 6, 9, 12, 18, 24, 36, 48, 54 Mbps 802.11n: MCS 0 ~ MCS 15, (20MHz, and 40MHz)

Modulation

Direct Sequence Spread Spectrum CCK, BPSK, QPSK, 16-QAM, 64-QAM

Security<sup>1</sup>

 IEEE and WiFi compliant 64 / 128 bit WEP encryption for a/b/g mode only

AES-CCMP: 128 bit in hardware

802.1x authentication

WPA, WPA2: 802.1x. WPA-PSK, WPA2-PSK, TKIP, and AES.

WPA2 certification

IEEE 802.11i

• Cisco Certified Extensions, all versions through CCX4 and CCX Lite

WAPI

**Sub-channels** 

Multinational support with frequency bands and channels compliant to local regulations.

**Network Architecture** 

Ad-hoc (Peer to Peer)

Models

Infrastructure (Access Point Required)

Roaming

IEEE 802.11 compliant roaming between band Access Points

Output Power<sup>2</sup>
• 2.4G: +13.5dBm minimum

5G: +12dBm minimum

**Power Consumption** 

Transmit: 2.0 Watts Receive: 1.6 Watts

Idle mode<sup>3</sup>: 150 mW (WLAN Associated) Idle mode: 50 mW (WLAN unassociated)

Radio off: 25 mW

**Power Management** 

802.11 compliant power saving mode

Receiver Sensitivity<sup>4</sup>

802.11g:-90 dBm (6 Mbps), -89 dBm (9 Mbps), -87 dBm (12 Mbps), -85 dBm (18 Mbps), -82 dBm (24 Mbps), -79 dBm (36 Mbps), -76 dBm (48 Mbps), -74

dBm (54 Mbps)

802.11b:-95 dBm (1 Mbps), -93 dBm (2 Mbps), -91 dBm (5.5 Mbps), -88

dBm (11 Mbps)



#### **Environmental Data**

802.11g:-90 dBm (6 Mbps), -89 dBm (9 Mbps), -87 dBm (12 Mbps), -85 dBm (18 Mbps), -82 dBm (24 Mbps), -79 dBm (36 Mbps), -76 dBm (48 Mbps), -74

dBm (54 Mbps)

802.11n:-69 dBm (150 Mbps), -66 dBm (300 Mbps)

**Antenna Connections** 2 U.FL type connectors (output impedance of  $50 \pm 2$  ohms)

Form Factor Customize LGA Card

**Dimensions** Width 17 x Depth 10.5 x High 1.5(mm)

**Operating Voltage** 3.3v +/- 9% and 1.8V +/- 9%

**Temperature** Operating 14° to 158° F (-10° to 70° C)

Non-operating -40° to 176° F (-40° to 80° C)

**Humidity** Operating 10% to 90% (non-condensing)

Non-operating 5% to 95% (non-condensing)

**Altitude** Operating 0 to 10,000 ft (3,048 m)

Non-operating 0 to 50,000 ft (15,240 m)

#### HP Integrated Module with Bluetooth 4.0 LE SDIO Wireless Technology\*

\*This module is Bluetooth Smart Ready for systems running Windows 8 and Windows 8.1.

**Bluetooth Specification** BT 4.0 LE SDIO

**Dimensions** Width 17 x Depth 10.5 x High 1.5(mm)

Frequency Band 2402 to 2480 MHz

**Number of Available** 

Channels

79 (1 MHz) available channels

**Data Rates and** 3 Mbps data rate; throughput up to 2.17 Mbps

**Throughput** Synchronous Connection Oriented links up to 3, 64 kbps, voice channels

Asynchronous Connection Less links 2178.1 kbps/177.1 kbps asymmetric

or 1306.9 kbps symmetric

Transmit Power -1.5 dBm to 4 dBm (Bluetooth Class II)

**Receiver Sensitivity** Better than -20 dBM at 0.1 % raw bit error rate

**Power Consumption** Peak (Tx) 300 mW

Peak (Rx) 180 mW

Selective Suspend 10 mW

**Antenna** Internally integrated within module

Range Up to 33 ft (10 m)
Electrical Interface UART compliant

Microsoft Windows Plug and Play compliant

**Bluetooth Software** 

Supported

Broadcom Bluetooth for Windows

Microsoft Windows Bluetooth Software
Point to Point, Multipoint Pico Nets up to 7 slaves

 Link Topology
 Point to Point, Multipoint Pico Nets up to 7 slave

 Security
 Full support of Bluetooth Security Provisions

 Power Management
 Microsoft Windows ACPI, and USB Bus Support

Self-configurable to optimize power conservation in all operating modes,

including Standby, Hold, Park, and Sniff

**Certifications** All necessary regulatory approvals for supported countries, including:

FCC (47 CFR) Part 15C, Section 15.247 & 15.249

ETS 300 328, ETS 300 826



#### **Environmental Data**

Low Voltage Directive IEC950

UL, CSA, and CE Mark

**Bluetooth Profiles** Supported

Serial Port Profile (SPP)1

Service Discovery Application Profile (SDAP)

Dial-Up Networking (DUN)1,2

Generic Object Exchange Profile (GOEP)1,2

Object Push Profile (OPP)1,2 File Transfer Profile (FTP) Synchronization Profile (SYNC)

Hard Copy Cable Replacement (HCRP)<sup>1,2</sup> Personal Area Networking Profile (PAN)<sup>1,2</sup> Human Interface Device Profile (HID)1,2

FAX Profile (FAX)

Basic Imaging Profile (BIP)2 Headset Profile (HSP) Hands Free Profile (HFP)

Advanced Audio Distribution Profile (A2DP)

### **AUDIO/MULTIMEDIA – HD audio**

**Audio Output Quality Frequency Response** 20 Hz - 20 kHz

Signal to Noise Ratio >85 dB **Total Harmonic** 0.01%

**Distortion** 

**Noise Floor** -110 dB Play/Record Sampling 8 kHz - 48kHz

**Rate**(s)

DAC 16, 20 or 24-bit **ADC** 16 or 20-bit

**Integrated Stereo** 

**Speakers** 

**Power Rating** 500mW **Impedance** 4 ohm

#### **POWER**

**HP 10W non-Smart AC** Adapter

**Dimensions** 2.56 x 2.17 x 1.12 in (65.0 x 55.0 x 28.5 mm)

Input 100 to 240 VAC

> **Input dPower Rating** < 15W Input frequency range 47 - 63 Hz**Input AC current** 0.3A at 90 VAC

Output Voltage 9V +/- 4.0%

> **Constant power** 11 W (maximum) continuously between DC

> > output 9V - 6.5V

Hold-up time 5 msec at 115 VAC input

Output current limit 1.1A



<sup>\*</sup> Wireless access point and internet service required and sold separately. Availability of public wireless access points limited.

#### **Environmental Data**

3 pin/grounded, mates with interchangeable cords; 70 pin / tyco connector Connector

(to tablet side)

**Environmental Design** Operating 32° to 95° F (0° to 35° C)

temperature

Non-operating (storage) -4° to 185° F (-20° to 85° C)

temperature

Operating altitude 0 to 16,404 ft (0 to 5,000 m) Non-operating altitude 0 to 50,000 ft (0 to 15,240 m)

**Humidity** 0% to 95% **Storage Humidity** 0% to 95%

**EMI and Safety Certifications** 

CE Mark - full compliance with LVD and EMC directives; Worldwide safety standards - IEC60950, EN60950, UL60950, Class 1, SELV; Agency approvals - C-UL-US, NORDICS, DENAN, EN55022 Class B, FCC Class B, CISPR22 Class

B, CCC, NOM-1 NYCE

HP 2-cell (30 WHr) **Polymer Long Life Primary battery** 

Weight  $0.17 \, kg$ 

Dimensions (H x W x L) 8.7 x 1.56 x 0.17 in

(22.09 x 13.963 x 0.43 cm)

Cells/Type 2-cell, Lithium Ion Polymer

Energy Voltage 7.4V

> **Amp-hour capacity** 4.2 **Watt-hour capacity** 30Wh

32° to 113° F (0° to 45° C) Operating (Charging)

**Operating (Discharging)** 14° to 140° F(-10° to 60° C) **Temperature** 

-4° to 140° F (-20° to 60° C) Non-operating

System in OFF or Standby depends on system setting **Battery Re-Charge Time** 

Mode

System ON depends on system setting

**Fuel Gauge LED** No **Optional Travel Battery** 

**Available** 



### **Environmental Data**

### **ENVIRONMENTAL DATA**

Eco-Label Certifications & declarations	This product has received or is may be labeled with one or mo		to the following approvals and				
<del></del>	IT ECO declaration						
	US ENERGY STAR®						
		in the United States. See http:/	//www.epeat.net for registration				
	status in your country.	•	,				
System Configuration	The configuration used for the Energy Consumption and Declared Noise Emissions data for t Notebook model is based on a "Typically Configured Notebook".						
Energy Consumption (in accordance with US ENERGY STAR® test method)	115VAC, 60Hz	115VAC, 60Hz 230VAC, 50Hz 100VA					
Normal Operation (Sort idle)	3.83 W	3.96 W	3.85 W				
Normal Operation (Long idle)	0.86 W	0.96 W	0.88 W				
Sleep	0.86 W	0.96 W	0.88 W				
Off	0.19 W	0.20 W	0.19 W				
	efficiency power supply, and a		aturing a hard disk drive, a high system.				
Hant Bindantinus	445046 600-	220446 FOIL-	40000. 6011-				
Heat Dissipation*	115VAC, 60Hz	230VAC, 50Hz	100VAC, 60Hz				
Normal Operation (Short idle)	13 BTU/hr	14 BTU/hr	13 BTU/hr				
Normal Operation (Short idle) Normal Operation (Long idle)	13 BTU/hr 3 BTU/hr	14 BTU/hr 3 BTU/hr	13 BTU/hr 3 BTU/hr				
Normal Operation (Short idle)	13 BTU/hr	14 BTU/hr	13 BTU/hr				
Normal Operation (Short idle) Normal Operation (Long idle) Sleep	13 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr	14 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr	13 BTU/hr 3 BTU/hr 3 BTU/hr				
Normal Operation (Short idle) Normal Operation (Long idle) Sleep Off	13 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr *NOTE: Heat dissipation is calcu	14 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr	13 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr				
Normal Operation (Short idle) Normal Operation (Long idle) Sleep Off  Declared Noise Emissions	13 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr *NOTE: Heat dissipation is calcuis attained for one hour.	14 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr	13 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr				
Normal Operation (Short idle) Normal Operation (Long idle) Sleep Off  Declared Noise Emissions (in accordance with	13 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr *NOTE: Heat dissipation is calcuis attained for one hour.	14 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr	13 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr watts, assuming the service level				
Normal Operation (Short idle) Normal Operation (Long idle) Sleep Off  Declared Noise Emissions (in accordance with ISO 7779 and ISO 9296) Typically Configured – Idle	13 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr *NOTE: Heat dissipation is calcuis attained for one hour.	14 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr	13 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr watts, assuming the service level				
Normal Operation (Short idle) Normal Operation (Long idle) Sleep Off  Declared Noise Emissions (in accordance with ISO 7779 and ISO 9296) Typically Configured – Idle Fixed Disk – Random writes	13 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr *NOTE: Heat dissipation is calculated is attained for one hour.  Sound Power (LwAd, bels)  2.0 2.0	14 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr ulated based on the measured v	13 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr 1 BTU/hr watts, assuming the service level  Sound Pressure (L <sub>pAm</sub> , decibels)  14 14				
Normal Operation (Short idle) Normal Operation (Long idle) Sleep Off  Declared Noise Emissions (in accordance with ISO 7779 and ISO 9296) Typically Configured – Idle Fixed Disk – Random writes	13 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr *NOTE: Heat dissipation is calcuis attained for one hour.  Sound Power (LwAd, bels)  2.0 2.0 This product can be upgraded, page 10 decreases the compared to the compared	14 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr ulated based on the measured w	13 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr 1 BTU/hr  vatts, assuming the service level  Sound Pressure (L <sub>pAm</sub> , decibels)  14 14 e by several years. Upgradeable				
Normal Operation (Short idle) Normal Operation (Long idle) Sleep Off  Declared Noise Emissions (in accordance with ISO 7779 and ISO 9296) Typically Configured – Idle Fixed Disk – Random writes	13 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr *NOTE: Heat dissipation is calculated is attained for one hour.  Sound Power (LwAd, bels)  2.0 2.0	14 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr ulated based on the measured w	13 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr 1 BTU/hr  vatts, assuming the service level  Sound Pressure (L <sub>pAm</sub> , decibels)  14 14 e by several years. Upgradeable				
Normal Operation (Short idle) Normal Operation (Long idle) Sleep Off  Declared Noise Emissions (in accordance with ISO 7779 and ISO 9296) Typically Configured – Idle Fixed Disk – Random writes	13 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr *NOTE: Heat dissipation is calculated is attained for one hour.  Sound Power (LwAd, bels)  2.0 2.0 This product can be upgraded, features and/or components compo	14 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr ulated based on the measured w	13 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr 1 BTU/hr  vatts, assuming the service level  Sound Pressure (L <sub>pAm</sub> , decibels)  14 14 e by several years. Upgradeable				
Normal Operation (Short idle) Normal Operation (Long idle) Sleep Off  Declared Noise Emissions (in accordance with ISO 7779 and ISO 9296) Typically Configured – Idle Fixed Disk – Random writes	13 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr  *NOTE: Heat dissipation is calculated is attained for one hour.  Sound Power (LwAd, bels)  2.0 2.0 This product can be upgraded, preatures and/or components com	14 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr ulated based on the measured w	13 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr 1 BTU/hr  vatts, assuming the service level  Sound Pressure (L <sub>pAm</sub> , decibels)  14 14 e by several years. Upgradeable				
Normal Operation (Short idle) Normal Operation (Long idle) Sleep Off  Declared Noise Emissions (in accordance with ISO 7779 and ISO 9296) Typically Configured – Idle Fixed Disk – Random writes	13 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr  *NOTE: Heat dissipation is calculated is attained for one hour.  Sound Power (LwAd, bels)  2.0 2.0 This product can be upgraded, preatures and/or components com	14 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr ulated based on the measured w	13 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr 1 BTU/hr  vatts, assuming the service level  Sound Pressure (L <sub>pAm</sub> , decibels)  14 14 e by several years. Upgradeable				
Normal Operation (Short idle) Normal Operation (Long idle) Sleep Off  Declared Noise Emissions (in accordance with ISO 7779 and ISO 9296) Typically Configured – Idle Fixed Disk – Random writes	13 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr  *NOTE: Heat dissipation is calculated is attained for one hour.  Sound Power (Lwad, bels)  2.0 2.0 This product can be upgraded, features and/or components comp	14 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr ulated based on the measured w	13 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr 1 BTU/hr  vatts, assuming the service level  Sound Pressure (L <sub>pAm</sub> , decibels)  14 14 e by several years. Upgradeable				
Normal Operation (Short idle) Normal Operation (Long idle) Sleep Off  Declared Noise Emissions (in accordance with	13 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr 1 BTU/hr  *NOTE: Heat dissipation is calculated is attained for one hour.  Sound Power (LwAd, bels)  2.0 2.0 This product can be upgraded, features and/or components compon	14 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr ulated based on the measured w	13 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr 1 BTU/hr  vatts, assuming the service level  Sound Pressure (L <sub>pAm</sub> , decibels)  14 14 e by several years. Upgradeable				
Normal Operation (Short idle) Normal Operation (Long idle) Sleep Off  Declared Noise Emissions (in accordance with ISO 7779 and ISO 9296) Typically Configured – Idle Fixed Disk – Random writes	13 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr 1 BTU/hr  *NOTE: Heat dissipation is calculated is attained for one hour.  Sound Power (LwAd, bels)  2.0 2.0 This product can be upgraded, features and/or components compon	14 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr ulated based on the measured we were the measured we were the measured we were the measured were the	13 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr 1 BTU/hr  vatts, assuming the service level  Sound Pressure (L <sub>pAm</sub> , decibels)  14 14 e by several years. Upgradeable				
Normal Operation (Short idle) Normal Operation (Long idle) Sleep Off  Declared Noise Emissions (in accordance with ISO 7779 and ISO 9296) Typically Configured – Idle Fixed Disk – Random writes	13 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr 1 BTU/hr  *NOTE: Heat dissipation is calculated is attained for one hour.  Sound Power (Lwad, bels)  2.0 2.0 This product can be upgraded, features and/or components compon	14 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr ulated based on the measured we were the measured we were the measured we were the measured were the	13 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr 1 BTU/hr  watts, assuming the service level  Sound Pressure (L <sub>pAm</sub> , decibels)  14 14 e by several years. Upgradeable				
Normal Operation (Short idle) Normal Operation (Long idle) Sleep Off  Declared Noise Emissions (in accordance with ISO 7779 and ISO 9296) Typically Configured – Idle Fixed Disk – Random writes	13 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr  *NOTE: Heat dissipation is calculated is attained for one hour.  Sound Power (LwAd, bels)  2.0 2.0 This product can be upgraded, features and/or components comp	14 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr ulated based on the measured we were the measured we were the measured we were the measured were the	13 BTU/hr 3 BTU/hr 3 BTU/hr 1 BTU/hr 1 BTU/hr  watts, assuming the service level  Sound Pressure (L <sub>pAm</sub> , decibels)  14 14 e by several years. Upgradeable				



### **Environmental Data**

	Spare parts are of production.	e available throughout the warranty period and or for	up to 5 years after the end		
Batteries	Batteries used	This battery(s) in this product comply with EU Directive 2006/66/EC  Batteries used in the product do not contain:  Mercury greater the1ppm by weight			
	Cadmium	greater than 20ppm by weight			
	Battery type: L	R2032 (coin cell) ithium -cell high capacity Lithium-Ion battery (optional 8 ce	ll available)		
Additional Information	<ul> <li>This product is in compliance with the Restrictions of Hazardous Substance directive - 2011/65/EC.</li> <li>This HP product is designed to comply with the Waste Electrical and Electro Equipment (WEEE) Directive - 2002/96/EC.</li> </ul>				
	<ul> <li>This p Drinki</li> <li>This p see w</li> <li>Plasti and IS</li> <li>This p</li> </ul>	roduct is in compliance with California Proposition 65 ng Water and Toxic Enforcement Act of 1986). roduct is in compliance with the IEEE 1680 (EPEAT) st ww.epeat.net cs parts weighing over 25 grams used in the product of 01043. roduct contains 1.5 % post-consumer recycled plastic roduct is 97.6 % recycle-able when properly disposed	tandard at the gold level, are marked per ISO11469 ic (by wt.)		
Packaging Materials	External:	PAPER/Paper	370 g		
	Internal:	PLASTIC/EPE (Expanded Polyethylene)	29 g		
		PLASTIC/Polyethylene low density	8 g		
		ckaging material contains at least 0 % recycled conte			
		d paper packaging materials contains at least 71 % r	-		
Material Usage	(refer to the HI http://www.hp	pes not contain any of the following substances in expense of the Environment at .com/hpinfo/qlobalcitizenship/environment/pdf/qse			
	<ul> <li>Asbestos</li> <li>Certain Azo Colorants</li> <li>Certain Brominated Flame Retardants – may not be used as flame retardants in plastics</li> <li>Cadmium</li> <li>Chlorinated Hydrocarbons</li> </ul>				
	<ul> <li>Chlorinated Paraffins</li> <li>Formaldehyde</li> <li>Halogenated Diphenyl Methanes</li> </ul>				
	Lead carbonates and sulfates     Lead and Lead compounds     Mercuric Oxide Batteries				
	<ul> <li>Nickel – finishes must not be used on the external surface designed to be frequently handled or carried by the user.</li> <li>Ozone Depleting Substances</li> </ul>				
		rominated Biphenyls (PBBs) rominated Biphenyl Ethers (PBBEs)			



### **Environmental Data**

	<ul> <li>Polybrominated Biphenyl Oxides (PBBOs)</li> <li>Polychlorinated Biphenyl (PCB)</li> <li>Polychlorinated Terphenyls (PCT)</li> <li>Polyvinyl Chloride (PVC) – except for wires and cables, and certain retail packaging has been voluntarily removed from most applications.</li> <li>Radioactive Substances</li> <li>Tributyl Tin (TBT), Triphenyl Tin (TPT), Tributyl Tin Oxide (TBTO)</li> </ul>
Packaging Usage	<ul> <li>HP follows these guidelines to decrease the environmental impact of product packaging:</li> <li>Eliminate the use of heavy metals such as lead, chromium, mercury and cadmium in packaging materials.</li> <li>Eliminate the use of ozone-depleting substances (ODS) in packaging materials.</li> <li>Design packaging materials for ease of disassembly.</li> <li>Maximize the use of post-consumer recycled content materials in packaging materials.</li> <li>Use readily recyclable packaging materials such as paper and corrugated materials.</li> <li>Reduce size and weight of packages to improve transportation fuel efficiency.</li> <li>Plastic packaging materials are marked according to ISO 11469 and DIN 6120 standards.</li> </ul>
End-of-life Management and Recycling	Hewlett-Packard offers end-of-life HP product return and recycling programs in many geographic areas. To recycle your product, please go to: <a href="http://www.hp.com/qo/reuse-recycle">http://www.hp.com/qo/reuse-recycle</a> or contact your nearest HP sales office. Products returned to HP will be recycled, recovered or disposed of in a responsible manner.  The EU WEEE directive (2002/95/EC) requires manufacturers to provide treatment information for each product type for use by treatment facilities. This information (product disassembly instructions) is posted on the Hewlett Packard web site at: <a href="http://www.hp.com/qo/recyclers">http://www.hp.com/qo/recyclers</a> . These instructions may be used by recyclers and other WEEE treatment facilities as well as HP OEM customers who integrate and re-sell HP equipment.
Hewlett-Packard Corporate Environmental Information	For more information about HP's commitment to the environment:  Global Citizenship Report



EN60601 EMC safety (EN 60601-1-2:2007 and IEC 60601-1-2:2014)

#### **CLEANING**

The following cleaning solutions, if used as instructed in the user guide, will not harm the HP ElitePad 1000 G2 Healthcare Tablet:

- Benzyl-C12-18-alkyldimethyl ammonium chlorides <1% with quaternary ammonium compounds, C12-14-alkyl[(ethylphenyl)methyl]dimethyl, chlorides <1%</li>
- Isopropanol 10%–20%, 2-butoxyethanol 1%–4%, benzyl-C12-18-alkyldimethyl ammonium chlorides <0.125%, and quaternary ammonium compounds, C12-18-alkyl [(ethylphenyl) methyl] dimethyl, chlorides <0.125%
- Isopropanol 30%–60%, benzyl-C12-18-alkyldimethyl ammonium chlorides 0.1%–1%, and quaternary ammonium compounds, C12-18-alkyl [(ethylphenyl) methyl] dimethyl 0.1%–1%
- Isopropyl alcohol wipes (Isopropyl alcohol 70%)
- Isopropanol 10%–20% and ethylene glycol monobutyl ether 1%–5%)
- n-Alkyl dimethyl benzyl ammonium chloride 5%–10%, didecyl dimethyl ammonium chloride 5%–10%, ethyl alcohol 1%–5%, and lauryl dimethyl amine oxide 0.1%–1.5%
- n-Alkvl dimethvl benzvl ammonium chloride 0.2%-0.4% with lauramine oxide 0.5%-1.5%
- Ethylene glycol n-hexyl ether 0.1%-1.0%, isopropanol 1%-5%, and water 90%-95%
- Sodium hypochlorite 1%–5% with sodium hydroxide 0.5%–2%
- Gentle dish soap and water
- Dry microfiber cleaning cloth or a chamois (static-free cloth without oil)
- Static-free cloth wipes

Please refer to the user guide that came with your product for detailed instructions about how to clean your HP ElitePad 1000 G2 Healthcare using these solutions.

### EN 60601-1-2: 2007\*

\*NOTE: The HP ElitePad 1000 G2 is a general purpose device and is not intended for use in the diagnosis, cure, treatment, or prevention of disease or other medical conditions.

The HP ElitePad 1000 G2 Healthcare Tablet needs special precautions regarding EMC and needs to be used according to the EMC information provided in this document.

WARNING! Portable and mobile RF communications equipment can affect the HP ElitePad 1000 G2 Healthcare Tablet.

#### **Accessories and cables**

Port type	HDMI	USB	USB	USB	Audio	Smart card slot
Name/description	Display/ monitor	USB keyboard	USB mouse	External HDD (USB 2.0)	Headphone/ microphone	Smart card

Port type	Dock	Dock PSU	AC/DC PSU
Name/description	HP ElitePad Docking Station	HP AC/DC Power Supply for Dock	HP AC/DC Power Supply
Manufacturer	НР	НР	Delta Electronics, Inc.



### EN60601 EMC safety (EN 60601-1-2:2007 and IEC 60601-1-2:2014)

Model number	HP ElitePad Docking Station	HSTNN-DA35	HSTNN-DA34

Ports and cabling – Standalone						
Port name on EUT	Cable description (or reason for no cables)	Qty	Length as tested (m)	Max length (m)	Shielded? (Y/N)	Termination box ID & port name
AC Input	AC/DC adapter	1	2.0	>3.0	No	Input Power
HDMI	HDMI	1	2.0	>3.0	No	Monitor
USB	USB port	1	0.5	>3.0	No	HDD

**WARNING!** Use of accessories, transducers and cables other than those specified or provided by the manufacturer of this equipment could result in increased electromagnetic emissions or decreased electromagnetic immunity of this equipment and result in improper operation.

Ports and cabling – Docked						
Port name on EUT	Cable description (or reason for no cables)	Qty	Length as tested (m)	Max length (m)	Shielded? (Y/N)	Termination box ID & port name
AC Input–Dock	AC/DC adapter	1	4.0	>3.0	No	Input Power
HDMI	HDMI	1	2.0	>3.0	No	Monitor
USB	USB port	2	0.5	>3.0	No	HDD
USB	Keyboard	1	2.0	>3.0	No	Keyboard
USB	Mouse	1	2.0	>3.0	No	Mouse
Line Out	3.5 mm	1	2.0	>3.0	No	Headphone
LAN	Ethernet	1	2.0	>3.0	No	Switch
VGA	VGA	1	1.0	>3.0	No	Monitor

### **ELECTROMAGNETIC EMISSIONS**

Guidance and manufacturer's declaration—electromagnetic emissions		
Emissions test	Compliance	Electromagnetic environment—guidance



### EN60601 EMC safety (EN 60601-1-2:2007 and IEC 60601-1-2:2014)

RF missions CISPR 11	Group 1	The ElitePad 1000 G2 uses RF energy only for its internal function. Therefore, its RF emissions are very low and are not likely to cause any interference in nearby electronic equipment.
RF emissions CISPR 11	Class B	The ElitePad 1000 G2 is suitable for use in all establishments, including domestic establishments and those directly
Harmonic emissions IEC 61000-3-2	Class D	connected to the public low-voltage power supply network that supplies buildings used for domestic purposes.
Voltage fluctuations/flicker emissions	Class Complies	

The HP ElitePad 1000 G2 Healthcare Tablet is intended for use in the electromagnetic environment specified below. The customer or the user of the HP ElitePad 1000 G2 Healthcare Tablet should assure that it is used in such an environment.

**WARNING!** Use of this equipment adjacent to or stacked with other equipment should be avoided because it could result in improper operation. If such use is necessary, this equipment and the other equipment should be observed to verify that they are operating normally.

#### Guidance and manufacturer's declaration—electromagnetic immunity

The HP ElitePad 1000 G2 Healthcare Tablet is intended for use in the electromagnetic environment specified below. The customer or the user of the HP ElitePad 1000 G2 Healthcare Tablet should assure that it is used in such an environment.

Immunity test	IEC 60601 test level	Compliance level	Electromagnetic environment— guidance
Electrostatic discharge (ESD) IEC 61000-4-2	± 6 kV contact	± 8 kV contact ± 2, 4, 8, 15 air	Floors should be wood, concreate, or ceramic tile. If floors are covered with synthetic material, the relative humidity should be at least 30%.
Electrical fast transient/ burst IEC 61000-4-4	<ul><li>± 2 kV for power supply lines</li><li>± 1 kV for input/output lines</li></ul>	± 2 kV for power supply lines ± 1 kV for input/output	Mains power quality should be that of a typical commercial or hospital environment.
Surge IEC 61000-4-5	± 1 kV line(s) to line(s) ± 2 kV line(s) to earth	± 0.5 kV, ± 1 kV line(s) to line(s)	Mains power quality should be that of a typical commercial or hospital environment.

**NOTE**: The HP ElitePad 1000 G2 is a general purpose device and is not intended for use in the diagnosis, cure, treatment, or prevention of disease or other medical conditions.



### **HP ElitePad 1000 G2 Healthcare Tablet**

EN60601 EMC safety (EN 60601-1-2:2007 and IEC 60601-1-2:2014)



EN60601 EMC safety (EN 60601-1-2:2007 and IEC 60601-1-2:2014)

### Guidance and manufacturer's declaration—electromagnetic immunity

	line(s)	to earth	I
Voltage dips, short interruptions, and voltage variations on power supply input lines IEC 61000-4-11	<5 % UT (>95 % dip in UT) for 0.5 cycle  40 % UT (60 % dip in UT) for 5 cycles  70 % UT (30 % dip in UT) for 25 cycles  <5 % UT (>95 % dip in UT) for 5 s	0% UT (100 % dip in UT) for 0.5 cycle  At 0°, 45°, 90°, 135°, 180°, 225°, 270° and 315°  40 % UT (60 % dip in UT) for 5 cycles  70 % UT (30 % dip in UT) for 25/30 cycles	Mains power quality should be that of a typical commercial or hospital environment. If the user of the HP ElitePar 1000 G2 Healthcare Tablet requires continued operation during power mains interruptions, it is recommended that the HP ElitePad 1000 G2 Healthcare Tablet be powered from an uninterruptible power supply or battery.
Power frequency (50/60 Hz) magnetic field IEC 61000-4-8	3 A/m	30 A/m 50 Hz and 60 Hz	Power frequency magnetic fields should be at levels characteristic of a typical location in a typical commercial or hospital environment.



### EN60601 EMC safety (EN 60601-1-2:2007 and IEC 60601-1-2:2014)

Because there can be many different applications/uses of the tablet, the Essential Performance is not determined at this time and will be defined by the end user.

#### Guidance and manufacturer's declaration—electromagnetic immunity

The HP ElitePad 1000 G2 Healthcare Tablet is intended for use in the electromagnetic environment specified below. The customer or the user of HP ElitePad 1000 G2 Healthcare Tablet should assure that it is used in such an environment.

Immunity test	IEC 60601 test level	Compliance level	Electromagnetic environment—guidance
Conducted RF	3 Vrms	3 V	Portable and mobile RF communications equipment should be used no closer to any part
IEC 61000-4-6	150 kHz to 80 MHz		of the HP ElitePad 1000 G2 Healthcare Tablet,
Radiated RF IEC 61000-4-3	3 V/m  80 MHz to 2.5 GHz  NOTE: The HP ElitePad 1000 G2 is a general purpose device and is not intended for use in the diagnosis, cure, treatment, or prevention of disease or other medical conditions.	10 V/m	including cables, than the recommended separation distance calculated from the equipment applicable to the frequency of the transmitter. <b>Recommended separation distance</b> $d = \frac{3.5}{V1}\sqrt{P} = \frac{3.5}{3}\sqrt{P} = 1.2\sqrt{P}$
	medical conditions.		80 MHz to 800 MHz: $d = \frac{3.5}{E1} \sqrt{P} = \frac{3.5}{10} \sqrt{P} = 0.35 \sqrt{P}$
			800 MHz to 2.5 GHz: $d = \frac{7}{E1} \sqrt{P} = \frac{7}{10} \sqrt{P} = 0.70 \sqrt{P}$

Where P is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer and d is the recommended separation distance in meters (m).

Field strengths from fixed RF transmitters, as determined by an electromagnetic site survey<sup>1</sup>, should be less than the compliance level in each frequency range.<sup>2</sup>

Interference may occur in the vicinity of equipment marked with the following symbol:

**NOTE**: At 80 MHz and 800 MHz, the higher frequency range applies.

**NOTE**: These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.



#### EN60601 EMC safety (EN 60601-1-2:2007 and IEC 60601-1-2:2014)

<sup>1</sup> Field strengths from fixed transmitters, such as base stations for radio (cellular/cordless) telephones and land mobile radios, amateur radio, AM and FM radio broadcast and TV broadcast cannot be predicted theoretically with accuracy. To assess the electromagnetic environment due to fixed RF transmitters, an electromagnetic site survey should be considered. If the measured field strength in the location in which the HP ElitePad 1000 G2 Healthcare Tablet is used exceeds the applicable RF compliance level above, the HP ElitePad 1000 G2 Healthcare Tablet should be observed to verify normal operation. If abnormal performance is observed, additional measures may be necessary, such as reorienting or relocating the HP ElitePad 1000 G2 Healthcare Tablet.

### Recommended separation distances between portable and mobile RF communications equipment and the HP ElitePad 1000 G2 Healthcare Tablet

The HP Elite Pad 1000 G2 Healthcare Tablet is intended for use in an electromagnetic environment in which radiated RF disturbances are controlled. The customer or the user of the HP Elite Pad 1000 G2 Healthcare Tablet can help prevent electromagnetic interference by maintaining a minimum distance between portable and mobile RF communications equipment (transmitters) and the HP Elite Pad1000 G2 Healthcare Tablet as recommended below, according to the maximum output power of the communications equipment.

	Separation distance according to frequency of transmitter (m)				
Rated maximum output power of transmitter (W)	150 kHz to 80 MHz 80 MHz to 800 MHz		80 MHz to 800 MHz		
	<i>d</i> =1.20√ <i>P</i>	<i>d</i> =0.35√ <i>P</i>	<i>d</i> =0.70√ <i>P</i>		
0.01	0.12	0.035	0.070		
0.1	0.38	0.11	0.22		
1	1.20	0.35	0.70		
10	3.80	1.1	2.2		
100	12	3.5	7.0		

For transmitters rated at a maximum output power not listed above, the recommended separation distance d in meters (m) can be estimated using the equation applicable to the frequency of the transmitter, where P is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer.

NOTE: At 80 MHz and 800 MHz, the separation distance for the higher frequency range applies.

**NOTE**: These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects, and people.



<sup>&</sup>lt;sup>2</sup> Over the frequency range 150 kHz to 80 MHz, field strengths should be less than 3 V/m.

EN60601 EMC safety (EN 60601-1-2:2007 and IEC 60601-1-2:2014)

### **Radiofrequency bandwidths**

Receiver technology	Frequency or frequency band of reception	Bandwidth
Bluetooth 4.0	2.4 GHz	2 MHz
Wifi 802.11 a/b/g/n	2.4 GHz and 5.0 GHz	20/40 MHz
NFC ISO18092, ISO14443A/B	13.553-13.567 MHz	14 kHz
LTE cat3	1900 MHz, 2100 MHz, 850 MHz, 2600 MHz, 1800 MHz, 900 MHz, 800 MHz	20 MHz

**WARNING!** The HP ElitePad 1000 G2 Healthcare Tablet may be interfered with by other equipment, even if that other equipment complies with CISPR Emission requirements.

### Radiofrequency transmitter bands and ERP

Transmitter technology	Frequency or frequency band	ERP (Effective Radiated Power)	E.I.R.P.
Bluetooth 4.0	2.4 GHz	8.04 dBm	10.19 dBm
Wifi 802.11 a/b/g/n	2.4 GHz and 5.0 GHz	2.4 GHz: 17.39 dBm 5 GHz: 19.7 dBm	2.4 GHz: 19.54 dBm 5 GHz: 21.85 dBm
NFC ISO18092, ISO14443A/B	13.5 MHz	-43 dBm	-40.85 dBm
LTE cat3	2100 MHz, 1900 MHz, 1800 MHz, 1700 MHz, 850 MHz, 2500	B1: 25.19 dBm B2: 26.02 dBm	B1: 27.34 dBm B2: 28.17 dBm
	MHz, 900 MHz, 800 MHz	B3: 24.17 dBm	B3: 26.32 dBm
		B5: 22.87 dBm	B5: 25.02 dBm
		B7: 21.63 dBm	B7: 23.78 dBm

Note: Measurement levels were taken with a WWAN radio model which may or may not be provided with your model.



EN60601 EMC safety (EN 60601-1-2:2007 and IEC 60601-1-2:2014)

### Emissions requirements of cables, transducers, and accessories

	,			
Port type	Dock	Dock PSU	Dock PSU	AC/DC PSU
Name/description	HP ElitePad Docking Station	HP AC/DC Power Supply for Dock	HP AC/DC Power Supply for Dock	HP AC/DC Power Supply
Manufacturer	НР	HP	НР	Delta Electronics, Inc
Model number	HP ElitePad Docking Station	HSTNN-LA35	HSTNN-DA35	HSTNN-DA34

**WARNING!** Use of an accessory with the HP ElitePad 1000 G2 Healthcare Tablet other than those specified in the table above may result in increased Emissions or decreased Immunity of the HP ElitePad 1000 G2 Healthcare Tablet.



EN60601 EMC safety (EN 60601-1-2:2007 and IEC 60601-1-2:2014)

### IEC 60601-1-2: 2014

HP ElitePad 1000 G2 Healthcare Tablet is suitable for use in all establishments, including domestic establishments and those directly connected to the public low-voltage power supply network that supplies buildings used for domestic purposes.

Essential Performance is not determined at this time and will be defined by the end user. There could be many different applications/uses of the tablet.

Use of this equipment adjacent to or stacked with other equipment should be avoided because it could result in improper operation. If such use is necessary, this equipment and the other equipment should be observed to verify that they are operating normally.

#### **Accessories and cables**

Port type	Name/description
HDMI	Display/monitor
USB	USB keyboard
USB	USB mouse
USB	External HDD (USB 2.0)
Audio	Headphone/microphone
Smart card slot	Smart card

Port type	Dock	Dock PSU	AC/DC PSU
Name/description	HP ElitePad Docking Station Station	HP AC/DC Power Supply for Dock Supply for Dock	HP ElitePad Docking Station
Manufacturer	НР	НР	Delta Electronics, Inc.
Model number	HP ElitePad Docking Station	HSTNN-DA35	HSTNN-DA34

Port name on EUT	Cable description (or reason for no cables)	Qty	Length as tested (m)	Max length (m)	Shielded? (Y/N)	Termination box ID & port name
AC Input	AC/DC adapter	1	2.0	>3.0	No	Input Power
НДМІ	HDMI	1	2.0	>3.0	No	Monitor
USB	USB port	1	0.5	>3.0	No	HDD

**WARNING!** Use of accessories, transducers and cables other than those specified or provided by the manufacturer of this equipment could result in increased electromagnetic emissions or decreased electromagnetic immunity of this equipment and result in improper operation.



EN60601 EMC safety (EN 60601-1-2:2007 and IEC 60601-1-2:2014)

Port name on EUT	Cable description (or reason for no cables)	Qty	Length as tested (m)	Max length (m)	Shielded? (Y/N)	Termination box ID & port name
AC Input–Dock	AC/DC adapter	1	4.0	>3.0	No	Input Power
HDMI	HDMI	1	2.0	>3.0	No	Monitor
USB	USB port	2	0.5	>3.0	No	HDD
USB	Keyboard	1	2.0	>3.0	No	Keyboard
USB	Mouse	1	2.0	>3.0	No	Mouse
Line Out	3.5 mm	1	2.0	>3.0	No	Headphone
LAN	Ethernet	1	2.0	>3.0	No	Switch
VGA	VGA	1	1.0	>3.0	No	Monitor

### **Electromagnetic and radiofrequency emissions**

Emissions test	Level/Class	Compliance
RF emissions (Radiated)	Group 1	Compliant
CISPR 11		
RF emissions (Conducted)	Class B	Compliant
CISPR 11		
Harmonic emissions	Class D	Compliant
IEC 61000-3-2		
Voltage fluctuations/ flicker emissions	N/A	Compliant
IEC 61000-3-3		

**WARNING!** Portable RF communications equipment (including peripherals such as antenna cables and external antennas) should be used no closer than 30 cm (12 inches) to any part of the HP ElitePad 1000 G2 Healthcare Tablet including cables specified by the manufacturer. Otherwise, degradation of the performance of this equipment could result.



EN60601 EMC safety (EN 60601-1-2:2007 and IEC 60601-1-2:2014)

### Guidance and manufacturer's declaration—electromagnetic immunity

The HP ElitePad 1000 G2 Healthcare Tablet is intended for use in the electromagnetic environment specified below.

The customer or the user of the HP ElitePad 1000 G2 Healthcare Tablet should assure that it is used in such an environment.

Immunity test	IEC 60601-1-2:2014 home healthcare test level	Compliance level	Compliance
Electrostatic discharge (ESD)	± 8 kV contact	± 8 kV contact	Compliant
IEC 61000-4-2	± 2, 4, 8, 15 air	± 2, 4, 8, 15 air	
Electrical fast transient/ burst IEC 61000-4-4	± 2 kV, 100 kHz for power supply lines	± 2 kV, 100 kHz for power supply lines	Compliant
120 01000 4 4	± 1 kV, 100 kHz for input/output lines	± 1 kV, 100 kHz for input/output lines	
Surge	± 0.5 kv, ± 1 kv line(s) to line(s)	± 0.5 kv, ± 1 kv line(s) to line(s)	Compliant
IEC 61000-4-5	±0.5 kv, ±1 kv, ± 2 kV line(s) to earth	$\pm 0.5$ kv, $\pm 1$ kv, $\pm 2$ kV line(s) to earth	
Voltage dips, short interruptions, and voltage variations on power supply	0% UT (100 % dip in UT) for 0.5 cycle At 0°, 45°, 90°, 135°, 180°, 225°,	0% UT (100 % dip in UT) for 0.5 cycle	Compliant
input lines IEC 61000-4-11	270°, and 315°	At 0°, 45°, 90°, 135°, 180°, 225°, 270°, and 315°	
	70 % UT (30 % dip in UT) for 25/30 cycles	70 % UT (30 % dip in UT) for 25/30 cycles	
	0% UT (100 % dip in UT) for 250/300 cycle	0% UT (100 % dip in UT) for 250/300 cycle	
	0% UT (100 % dip in UT) for 1 cycle	0% UT (100 % dip in UT) for 1 cycle	
Power frequency (50/60 Hz) magnetic field	30 A/m	30 A/m	Compliant
IEC 61000-4-8	50 Hz and 60 Hz	50 Hz and 60 Hz	

NOTE: UT is the AC mains voltage prior to application of the test level.



EN60601 EMC safety (EN 60601-1-2:2007 and IEC 60601-1-2:2014)

#### Guidance and manufacturer's declaration—electromagnetic immunity

The HP ElitePad 1000 G2 Healthcare Tablet is intended for use in the electromagnetic environment specified below.

The customer or the user of the HP ElitePad 1000 G2 Healthcare Tablet should assure that it is used in such an environment.

Immunity test	IEC 60601-1-2:2014 home healthcare test level	Compliance level	Electromagnetic environment— guidance
Conducted RF IEC 61000-4-6	Applies to both power supply lines and input/output lines:  3 V  0.15–80 MHz  6 V in ISM and amateur radio bandsa between 0.15–80 MHz  80% AM at 1 kHz	Applies to both power supply lines and input/output lines:  3 V  0.15–80 MHz  6 V in ISM and amateur radio bands <sup>a</sup> between 0.15–80 MHz  80% AM at 1 kHz	Compliant
Radiated RF EM Fields IEC 61000-4-3	10 V/m 80 MHz–2.7 GHz 80% AM at 1 kHz	10 V/m 80 MHz–2.7 GHz 80% AM at 1 kHz	Compliant

### Guidance and manufacturer's declaration—electromagnetic immunity

Proximity fields from RF wireless communication equipment

See <u>Table 12-3 Proximity fields</u> <u>from RF wireless communication</u> equipment on page 69.

See <u>Table 12-3 Proximity fields</u> <u>from RF wireless communication</u> equipment on page 69.

Compliant

<sup>a</sup> The ISM (industrial, scientific and medical) bands between 0,15 MHz and 80 MHz are 6,765 MHz to 6,795 MHz; 13,553 MHz to 13,567 MHz; 26,957 MHz to 27,283 MHz; and 40,66 MHz to 40,70 MHz. The amateur radio bands between 0,15 MHz and 80 MHz are 1,8 MHz to 2,0 MHz, 3,5 MHz to 4,0 MHz, 5,3 MHz to 5,4 MHz, 7 MHz to 7,3 MHz, 10,1 MHz to 10,15 MHz, 14 MHz to 14,2 MHz, 18,07 MHz to 18,17 MHz, 21,0 MHz to 21,4 MHz, 24,89 MHz to 24,99 MHz, 28,0 MHz to 29,7 MHz and 50,0 MHz to 54,0 MHz.



EN60601 EMC safety (EN 60601-1-2:2007 and IEC 60601-1-2:2014)

Test frequency (MHz)	Band (MHz)	Service	Voltage level	Modulation	Compliance
385	380-390	TETRA 400	27	50% PM, 18 Hz	Compliant
450	430–470	GMRS 460, FRS 460	28	FM ± 5 kHz deviation, 1 kHz sine	Compliant
710	704–787	LTE Band 13, 17	9	50% PM, 217 Hz	Compliant
'45					Compliant
780					Compliant
810	800–960	GSM 800/900,	28	50% PM, 18 Hz	Compliant
870		TETRA 800, IDEN 820, CDMA			Compliant
930		850, LTE Band 5			Compliant
720	1700–1990	GSM 1800, CDMA	28	50% PM, 217 Hz	Compliant
1845		1900, GSM 1900, DECT, LTE Band 1, 3,			Compliant
1970		4, 25, UMTS			Compliant
2450	2400–2570	Blutetooth, WLAN, 802.11 b/g/n, RFID 2450. LTE	28	50% PM, 217 Hz	Compliant
5240	5100–5800 WLAN 802.11 a/n 9 50	50% PM, 217 Hz	Compliant		
5500					Compliant
5785					Compliant



Cleaning

### RADIOFREQUENCY BANDWIDTHS

Receiver technology	Frequency or frequency band of reception	Bandwidth
Bluetooth 4.0	2.4 GHz	2 MHz
Wifi 802.11 a/b/g/n	2.4 GHz and 5.0 GHz	20/40 MHz
NFC ISO18092, ISO14443A/B	13.553-13.567 MHz	14 kHz
LTE cat3	1900 MHz, 2100 MHz, 850 MHz, 2600 MHz, 1800 MHz, 900 MHz, 800 MHz	20 MHz

### RADIOFREQUENCY TRANSMITTER BANDS AND ERP

Transmitter technology	Frequency or frequency band	ERP (Effective Radiated Power)	E.I.R.P.
Bluetooth 4.0	2.4 GHz	8.04 dBm	10.19 dBm
Wifi 802.11 a/b/g/n	2.4 GHz and 5.0 GHz	2.4 GHz: 17.39 dBm	2.4 GHz: 19.54 dBm
		5 GHz: 19.7 dBm	5 GHz: 21.85 dBm
NFC ISO18092, ISO14443A/B	13.5 MHz	-43 dBm	-40.85 dBm
LTE cat3	2100 MHz, 1900 MHz, 1800 MHz,	B1: 25.19 dBm	B1: 27.34 dBm
	1700 MHz, 850 MHz, 2500 MHz, 900 MHz, 800 MHz	B2: 26.02 dBm	B2: 28.17 dBm
	30011112, 00011112	B3: 24.17 dBm	B3: 26.32 dBm
		B5: 22.87 dBm	B5: 25.02 dBm
		B7: 21.63 dBm	B7: 23.78 dBm

Note: Measurement levels were taken with a WWAN radio model which may or may not be provided with your model

Туре	Description	Part #
Docking	HP ElitePad Docking Station	H4J84AA
	HP ElitePad Docking Station	COM84AA#ABA
Input/Output	HP Executive Tablet Pen (G2)*	F3G73AA
	HP Executive Capacitive Stylus	G4Y85AA
	HP ElitePad 3.0 Adapter	E8F98AA
	HP ElitePad SD Card Reader	H3N48AA
	HP ElitePad Serial Adapter	H3N50AA
	HP Slim Bluetooth Keyboard	H4Q44AA
	HP Mini Wireless Keyboard (Mulit-OS)	E5J21AA



H6F25AA

H3N47AA

F5V88A6

#### Change Log

Power

The Otta Flobite Wiletess Flouse	1101 23/1/1
HP X4000b Bluetooth Mouse	H3T50AA
HP Slim Bluetooth Mouse	F3J92AA
HP Touch to Pair Mouse (Bluetooth)	H6E52AA
* HP Executive Tablet Pen (G2) is only compatible with HP ElitePad 1000 G2. Revolve G2 and HP Pro Tablet 610 G1.	, HP
HP ElitePad 10 Watt AC Adapter	H4K08AA
HP ElitePad 40W AC Adapter	H5W93AA
HP FlitePad 12W USB Auto Adapter	F5V8744

Video HP ElitePad HDMI & VGA Adapter H3N45AA

**HP Ultra Mobile Wireless Mouse** 

HP ElitePad Smart AC Adapter

HP ElitePad USB Chrg 24Pk Cable

Networking HP ElitePad Ethernet Adapter H3N49AA

HP ElitePad Power/Ethernet Adapter F9D31AA

Charging Station HP Multi-Tablet Charging Module H4W98UT

**NOTE**: For additional information and specifications for the HP ElitePad Accessories, please access the HP ElitePad Accessories QuickSpecs: http://h18004.www1.hp.com/products/quickspecs/14491\_div/14491\_div.html

Copyright © 2015 Hewlett-Packard Development Company, L.P.

Microsoft and Windows are U.S. trademarks of Microsoft Corporation. Intel® and Atom are registered trademarks or trademarks of Intel® Corporation in the U.S. and/or other countries. Bluetooth is a registered trademark of Bluetooth SIG, Inc., in the U.S. and other countries. Corning and Gorilla are registered trademarks of Corning in the U.S. and/or other countries. Qualcomm and Gobi are trademarks of Qualcomm Incorporated, registered in the United States and other countries. Trademarks of Qualcomm Incorporated are used with permission. For DTS patents, see http://patents.dts.com. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS Studio Sound is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved. The information contained herein is subject to change without notice and is provided "as is" without warranty of any kind. The warranties for HP products are set forth in the express limited warranty statements accompanying such products. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

